


1. SNAP RING – SEAL
2. SHAFT SEAL
3. DRIVE COVER
4. TRUNNION THRUST WASHER (2)
5. TRUNNION NUT O-RING (2)
6. TRUNNION NEEDLE BEARING (2)
7. TRUNNION NUT (2)
8. SNAP RING – SHAFT
9. BEARING CUP (2)
10. BEARING CONE (2)
11. SNAP RING – BORE
12. DRIVESHAFT
13. SWASH PLATE
14. THRUST PLATE
15. PISTON ASSEMBLY (7)
16. HOLD DOWN PLATE
17. SNAP RING – HOLD DOWN
18. PISTON SPRING (7)
19. SPRING SEAT (7)
20. BRONZE ROTOR
21. VALVE PLATE
22. DOWEL PIN
23. NEEDLE BEARING – REAR
24. HOUSING O-RING
25. NULL CONTROL PISTON
26. VOLUME CONTROL PISTON
27. STARTER SPRING
28. PORT END COVER
29. CASE DRAIN O-RING PLUG
30. NULL ADJUSTMENT O-RING
31. NULL ADJUSTMENT BACKUP RING
32. NULL ADJUSTMENT SCREW STOP
33. JAM NUT
34. PORT END COVER BOLT (4)
35. VOLUME ADJUST O-RING PLUG
36. HYDRAULIC CONTROL(S) BOLT (4)
37. HYDRAULIC CONTROL(S) [OPT.]
38. TRUNNION NUT SUB-ASSEMBLY

FOR TANDEM MODELS ONLY

39. PORT END COVER – TANDEM
40. SHAFT SEAL – REAR END
41. COVER PLATE GASKET
42. COUPLING
43. COVER PLATE
44. COVER PLATE BOLT (2)

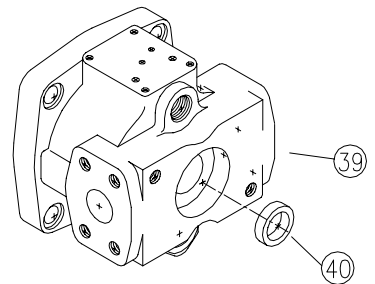

NOT TO SCALE

THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF HARTMANN CONTROLS INC., AND IS NOT TO BE USED IN A MANNER DETRIMENTAL TO HARTMANN CONTROLS INC.

DWG: PVC34-43IS

TITLE: PVC 34/43
VARIABLE
DISPLACEMENT
AXIAL PISTON PUMP